
Operation 6004

ritëtemp.

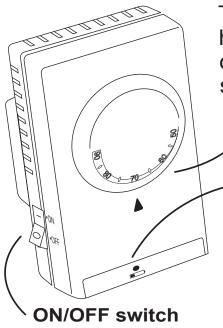

This unit is a 110/220 AC heater thermostat unit and cannot control a cooling system.


Temperature
Dial
Low Battery
Indicator

Statement of use: The 6004 can be used with most 120/208/240 volt electric heating devices. It provides Line voltage control for radiant cable, electric baseboard, and resistive-rated fan forced heaters within the ratings listed. Electrical Rating: 120/208/240Vac; 16A max load

Operation

Switch the ON/OFF switch to ON.
Turn the Temperature dial to select the desired temperature. Higher temperature - counter clockwise Lower temperature - clockwise

NOTE: LED blinks when batteries are low. Caution: Heating system will stop when batteries die.

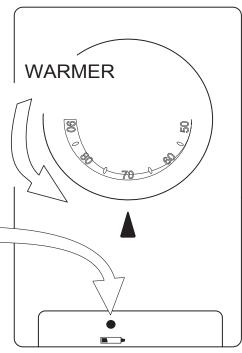

1611-019