

# Operation 8099

# ritētemp®

Once you have installed the thermostat, follow the instructions below to operate your new thermostat.

## 1 Configure

- Set HEAT/COOL mode switch to HEAT or COOL. Set the Fan switch to automatic.

Statement of use: The GPMG8099 can be used with most 24 volt gas, oil or electric heating systems, or gas millivolt heating systems. **It cannot be used with 120 volt heating systems or heat pumps.**

PG 1

## 2 Set Temp

Turn the Temperature dial to select the desired temperature.

- Warmer - counter clockwise (red)
- Cooler - clockwise (blue)

## 3 Operate

- Your thermostat is now in operation.

In the winter, set the system switch to HEAT to control your heating system.

In the summer, set the system switch to COOL to control your air conditioner.


In spring and fall or when windows are open, you can set the system switch OFF.

Setting the FAN switch to AUTO automatically runs your system's fan during heating and cooling.

Setting the FAN switch to ON runs your system's fan continuously even without heating or cooling.

**NOTE:** LED blinks when batteries are low.

Caution: System will stop when batteries die.

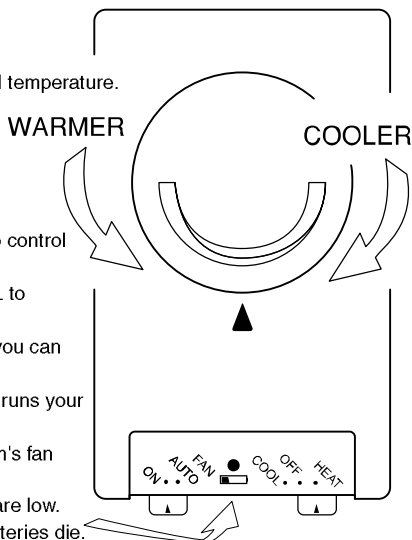

PG 2